


# CAN/I<sup>2</sup>C Activity Board Pro v1.00

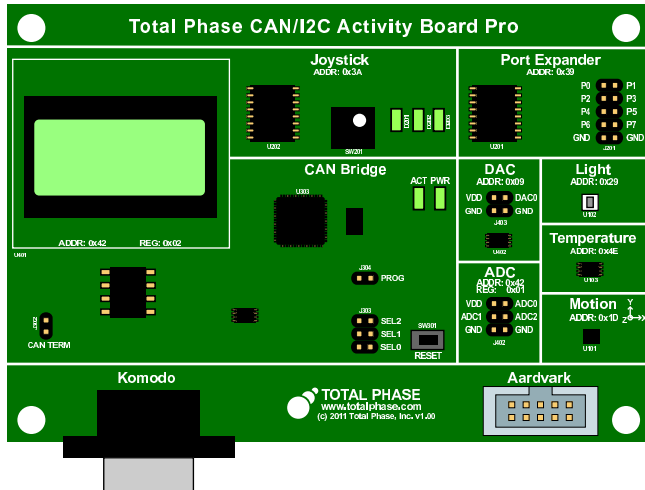

## Summary

The CAN/I<sup>2</sup>C Activity Board Pro is a great tool to help with embedded systems development. This activity board provides working target devices to aid developers in the debugging of their systems and interface software. Target devices featured on this activity board can operate as CAN nodes or I<sup>2</sup>C slaves. This board is compatible with the Komodo CAN Duo interface and the Aardvark I<sup>2</sup>C /SPI Host Adapter.



# TOTAL PHASE

## CAN/I<sup>2</sup>C Activity Board Pro



## Datasheet v1.00 July 15, 2011

## Contents

<b>1</b>	<b>Hardware Specifications</b>	<b>5</b>
1.1	Signaling Level/Voltage Ratings . . . . .	5
1.2	CAN Signaling Characteristics . . . . .	5
	Speed . . . . .	5
	Known CAN Limitations . . . . .	6
1.3	I <sup>2</sup> C Signaling Characteristics . . . . .	6
	Speed . . . . .	6
	Pull-up Resistors . . . . .	6
	Known I <sup>2</sup> C Limitations . . . . .	6
1.4	Communication Protocol . . . . .	6
	CAN . . . . .	6
	I <sup>2</sup> C . . . . .	8
1.5	CAN Bridge Interrupts . . . . .	8
1.6	Application Notes . . . . .	9
	CAN Node Errors . . . . .	9
	I <sup>2</sup> C Board Configuration . . . . .	9
<b>2</b>	<b>Targets</b>	<b>10</b>
2.1	DAC (0x09) . . . . .	10
	CAN Operation . . . . .	11
	I <sup>2</sup> C Operation . . . . .	11
2.2	Motion Sensor (0x1D) . . . . .	11
	CAN Operation . . . . .	11
	I <sup>2</sup> C Operation . . . . .	12
2.3	Light Sensor (0x29) . . . . .	12
	CAN Operation . . . . .	13
	I <sup>2</sup> C Operation . . . . .	13
2.4	GPIO Port Expander (0x39) . . . . .	14
	CAN Operation . . . . .	14
	I <sup>2</sup> C Operation . . . . .	15
2.5	Joystick/LEDs (0x3A) . . . . .	15
	CAN Operation . . . . .	16
	I <sup>2</sup> C Operation . . . . .	16
2.6	ADC/LCD (0x42) . . . . .	16
	CAN Operation . . . . .	17
	I <sup>2</sup> C Operation . . . . .	18
2.7	Temperature Sensor (0x4E) . . . . .	20
	CAN Operation . . . . .	20
	I <sup>2</sup> C Operation . . . . .	21
<b>3</b>	<b>Connectors, Headers, Buttons, and LEDs</b>	<b>22</b>
3.1	Port Expander Header (J201) . . . . .	22

3.2	Komodo Connector (J301)	22
3.3	CAN Termination Header (J302)	23
3.4	Select Header (J303)	23
3.5	Program Header (J304)	23
3.6	Aardvark Connector (J401)	24
3.7	ADC Header (J402)	24
3.8	DAC Header (J403)	24
3.9	Reset Button (SW301)	25
3.10	Power LED (D304)	25
3.11	Activity LED (D305)	25
<b>4</b>	<b>References</b>	<b>26</b>
4.1	Examples	26
4.2	Technical Specifications	26
<b>5</b>	<b>Legal / Contact</b>	<b>27</b>
5.1	Disclaimer	27
5.2	Life Support Equipment Policy	27
5.3	Contact Information	27

## List of Figures

1	DAC	10
2	Motion Sensor	12
3	Light Sensor	13
4	GPIO Port Expander	14
5	Joystick, LEDs, and Port Expander #2	16
6	ADC and LCD	17
7	Temperature Sensor	21
8	CAN/I <sup>2</sup> C Activity Board Pro Connectors	22
9	DE-9 Connector Pin Numbers	22

## List of Tables

1	Electrical Characteristics/Requirements	5
2	Standard CAN OpCodes	7
3	Extended CAN OpCodes	8
4	Summary of CAN/I <sup>2</sup> C Activity Board Pro Target Devices	10
5	CAN Set DAC Data Payload	11
6	CAN Set DAC Data Example	11
7	CAN Get Motion Data Payload	12
8	CAN Get Motion Data Example	12
9	CAN Get Light Data Payload	13
10	CAN Get Light Data Example	13
11	CAN Get GPIO Data Payload	14
12	CAN Get GPIO Data Example	15

13	CAN Set GPIO Data Payload	15
14	CAN Set GPIO Data Example	15
15	Connections to Joystick, LED, and Port Expander #2 Pinout	16
16	CAN Get ADC Data Payload	18
17	CAN Get ADC Data Example	18
18	CAN Set LCD Data Payload	18
19	CAN Set LCD Data Example	18
20	I <sup>2</sup> C Get ADC Data Payload	19
21	I <sup>2</sup> C Get ADC Data Example	19
22	I <sup>2</sup> C Set LCD Data Payload	19
23	I <sup>2</sup> C Set LCD Data Example	20
24	I <sup>2</sup> C Get LCD Data Payload	20
25	I <sup>2</sup> C Get LCD Data Example	20
26	CAN Get Temperature Data Payload	21
27	CAN Get Temperature Data Example	21
28	Komodo Connector J301 Pinout	23
29	Selection Header J303 Pinout	23
30	Aardvark Connector J401 Pinout	24
31	ADC Header J402 Pinout	24
32	DAC Header J403 Pinout	25

# 1 Hardware Specifications

## 1.1 Signaling Level/Voltage Ratings

*Table 1: Electrical Characteristics/Requirements*

Parameter	Min	Max	Unit	
<b>Supplies</b>				
VDD	3.1	3.5	V	
<b>CAN</b>				
Supply Input (V+)	4.3	5.5	V	
Single-ended Input	-12	12	V	
Differential Input	-7	7	V	
Single-ended Output (Dominant)	CAN+	2.9	4.5	V
	CAN-	0.8	1.5	V
Single-ended Output (Recessive)	2	3	V	
Differential Output (Dominant)	1.4	3	V	
Differential Output (Recessive)	-0.5	0.05	V	
<b>I<sup>2</sup>C</b>				
Supply Input	4.3	5.5	V	
I <sup>2</sup> C Inputs (Low)	-0.5	0.3*VDD	V	
I <sup>2</sup> C Inputs (High)	0.7	VDD+0.5	V	
I <sup>2</sup> C Outputs (Low)	0	0.4	V	
<b>GPIO Port Expander</b>				
GPIO Inputs (Low)	-0.5	0.8	V	
GPIO Inputs (High)	2.0	5.5	V	
GPIO Outputs (Low)		0.7	V	
GPIO Outputs (High)	2.5		V	
<b>ADC</b>				
ADC Inputs	0	VDD	V	
<b>DAC</b>				
DAC Output	0	VDD	V	

**Notes:**

- The CAN/I<sup>2</sup>C Activity Board Pro will not supply target power on the Komodo or Aardvark header.
- The CAN bus is not electrically isolated from the rest of the board.

## 1.2 CAN Signaling Characteristics

### Speed

The CAN/I<sup>2</sup>C Activity Board Pro will run at 125 kbps by default. If a different bitrate is desired, set the board to auto-baud on the CAN bus through the appropriate selection pin (see Section 3.4).

## Known CAN Limitations

### CAN Buffer Saturation

The CAN bridge includes multiple receive buffers for CAN packets. If the CAN receive buffer overflows, then packets will be acknowledged by the node, but not processed.

The CAN bridge also includes a small number of transmit buffers for which outgoing packets can be queued. A packet will not leave this queue until it has been successfully transmitted. If the queue is full when the bridge attempts to write another CAN packet to the bus, it will block until there is room in the queue.

In order to avoid either buffer saturating, no more than approximately 10 packets per 100 ms should be sent on the CAN bus.

## 1.3 I<sup>2</sup>C Signaling Characteristics

### Speed

The I<sup>2</sup>C on the CAN/I<sup>2</sup>C Activity Board Pro operates at 100 kHz.

### Pull-up Resistors

The CAN/I<sup>2</sup>C Activity Board Pro includes a 4.7k pull-up resistor to VDD on the SCL and SDA lines.

### Known I<sup>2</sup>C Limitations

The CAN/I<sup>2</sup>C Activity Board Pro is not designed to work with multi-master situations. If the board is intended to be used with other I<sup>2</sup>C masters then the I<sup>2</sup>C master functionality of the CAN bridge should be inhibited. See Section 3.4 for more information on how to do this.

## 1.4 Communication Protocol

It is important to understand the basics of how the CAN/I<sup>2</sup>C Activity Board Pro operates and how the target devices communicate over both CAN and I<sup>2</sup>C. None of the targets are CAN-compatible themselves, but the CAN/I<sup>2</sup>C Activity Board Pro features a microcontroller which serves as a bridge between the CAN bus and the target interfaces. This bridge allows all of the targets to operate as CAN nodes on the CAN bus. Many of the targets are I<sup>2</sup>C devices, so they can interface directly with the Aardvark I<sup>2</sup>C /SPI Host Adapter. The microcontroller also implements an I<sup>2</sup>C slave (0x42), which allows the LCD display and ADC to communicate over I<sup>2</sup>C.

### CAN

The CAN bridge simulates a number of CAN nodes by bridging each I<sup>2</sup>C device on the CAN/I<sup>2</sup>C Activity Board Pro to the CAN bus. Each node ID is equivalent to the I<sup>2</sup>C ID which is displayed on the silkscreen of the PCB.

The CAN/I<sup>2</sup>C Activity Board Pro follows a protocol that is similar to CANOpen. Each 11-bit ID field of the CAN packet is split into a 7-bit node address and a 4-bit opcode. Two opcodes are defined in Table 2 which can be used for standard communication with the CAN bridge.

**Table 2: Standard CAN OpCodes**

<b>Opcode (binary)</b>	<b>RTR</b>	<b>Description</b>
0000	1	Request device data
0010	0	Set device data

As an example, if we were to set the programmable LEDs on the board, then we would send the following information on the bus:

**CAN ID** = {OpCode : Node ID} = {0010 : 0111010} = 0x13A  
**RTR** = False  
**DLC** = 1  
**Data** = 0x80

On the other hand, if we were to poll the Joystick for its current position, we would send the following information on the bus:

**CAN ID** = {OpCode : Node ID} = {0000 : 0111010} = 0x03A  
**RTR** = True  
**DLC** = 1  
**Data** = N/A

The response from the CAN bridge will then be a non-RTR packet with the same CAN ID, and will have the appropriate data payload.

Using these Standard Opcodes provides a convenient method for getting and setting device data, however it does not necessarily provide a means to access the full functionality of each node. For example, this protocol does not define a method for configuring specific pins of the GPIO port to be inputs or outputs.

In order to complete more advanced tasks on a node, it is important to remember that each node on the CAN/I<sup>2</sup>C Activity Board Pro is in reality an I<sup>2</sup>C device, and that the CAN bridge functions as an I<sup>2</sup>C master on this bus. The opcodes provided earlier simply abstracted one or more I<sup>2</sup>C calls to the I<sup>2</sup>C slave in order to get or set the device data. The following opcodes provide a mechanism for controlling the I<sup>2</sup>C master explicitly. In each case the opcode determines the type of I<sup>2</sup>C command being sent, the node ID would represent the I<sup>2</sup>C slave to be addressed, and the data payload would be the actual data transmitted on the bus.

By following the specific I<sup>2</sup>C communication protocol for a specific sensor, the extended CAN opcodes can be used to access any feature of the I<sup>2</sup>C device.

As an example, if we were to configure the GPIO port expander to have 4 inputs and 4 outputs, we would need to send the following command:

Once configured this way, the GPIO input pins could be polled or outputs set through the stan-

**Table 3: Extended CAN OpCodes**

Opcode (binary)	RTR	Description
1000	1	I <sup>2</sup> C Read w/ Stop
1010	0	I <sup>2</sup> C Write w/ Stop
1100	1	I <sup>2</sup> C Read w/ No Stop
1110	0	I <sup>2</sup> C Write w/ No Stop

**CAN ID** = {OpCode : Node ID} = {1010 : 0111010} = 0x539  
**RTR** = False  
**DLC** = 2  
**Data** = 0x03, 0x0F

standard opcode method described previously.

If instead we were to read out the current configuration of the GPIO node, we would actually need to send two I<sup>2</sup>C commands. The first sets up the register we wish to read with a No Stop condition, and the second reads the data out.

**CAN ID** = {OpCode : Node ID} = {1110 : 0111010} = 0x739  
**RTR** = False  
**DLC** = 1  
**Data** = 0x03

---

**CAN ID** = {OpCode : Node ID} = {1000 : 0111010} = 0x439  
**RTR** = True  
**DLC** = 1  
**Data** = N/A

Please note that once a No Stop condition is issued to the CAN bridge, it will ignore all standard requests until a Stop condition has been issued. Additionally, if an I<sup>2</sup>C command is lost due to arbitration issues, it will not be retransmitted on the I<sup>2</sup>C bus.

## I<sup>2</sup>C

The CAN/I<sup>2</sup>C Activity Board Pro uses I<sup>2</sup>C to communicate with each of the nodes on the bus. For specifics on how to communicate with a specific node, please refer to Section 2.

### 1.5 CAN Bridge Interrupts

The CAN bridge is tied to the interrupt pins of the two port expander targets (See Section 2). Thus when one of these pins asserts, the appropriate I<sup>2</sup>C target will be polled, and the data will be broadcast on the CAN bus.



## 1.6 Application Notes

### CAN Node Errors

The CAN packet transmitted to the CAN/I<sup>2</sup>C Activity Board Pro must match one of the defined Opcode and RTR schemes defined in Section 1.4. If not, then the packet will be ignored by the CAN bridge.

Additionally, the Standard Opcodes will only be recognized for node IDs that are defined in Table 4. The Extended Opcodes can be used with any node ID, and can thus be used to extend to other I<sup>2</sup>C slaves that are not included on the CAN/I<sup>2</sup>C Activity Board Pro .

If there is ever an I<sup>2</sup>C error when the CAN bridge is attempting to process an RTR packet, a response will still be sent by the bridge. However, the DLC will be 0 and the payload will be empty.

### I<sup>2</sup>C Board Configuration

The CAN bridge implements an I<sup>2</sup>C master in order to talk with the devices on the board. However, the CAN bridge is not designed to work in multi-master situations. In order to successfully use the CAN/I<sup>2</sup>C Activity Board Pro with an external master (such as the Aardvark I<sup>2</sup>C /SPI Host Adapter), it is important to configure the board correctly.

To use the board with an I<sup>2</sup>C master, please configure the board in the following manner:

- Disconnect the board from any CAN bus.
- SEL0 should be left open.
- SEL1 should be left open.
- SEL2 should be jumped.

For more information on the selection pins, please refer to Section 3.4.


## 2 Targets

Table 4 summarizes all the target devices and their CAN IDs/I<sup>2</sup>C addresses. Each node can be accessed by I<sup>2</sup>C or CAN. In situations where the Extended CAN Opcodes are used (see Table 3), follow the notes on I<sup>2</sup>C operation for that device.

**Table 4:** Summary of CAN/I<sup>2</sup>C Activity Board Pro Target Devices

Target	CAN Node ID = I <sup>2</sup> C Slave Address
Digital-to-Analog Converter (DAC)	0x09
Motion Sensor	0x1D
Light Sensor	0x29
GPIO Port Expander	0x39
Joystick / LEDs	0x3A
ADC / LCD	0x42
Temperature Sensor	0x4E

### 2.1 DAC (0x09)

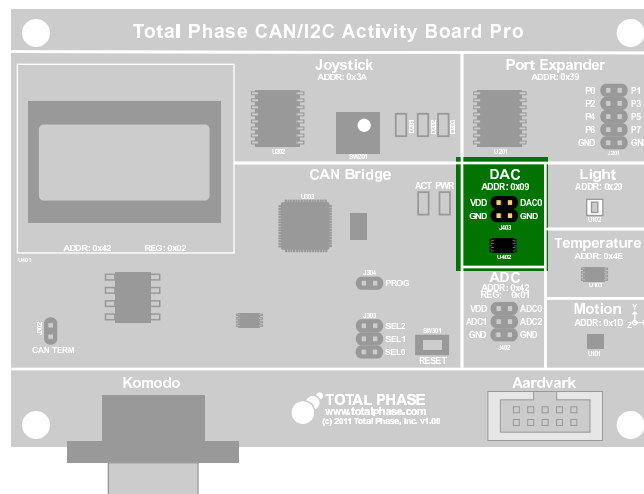

**Figure 1:** DAC

**Part:** National Semiconductor DAC081C085

**Datasheet:** <http://www.national.com/profile/snip.cgi/openDS=DAC081C085>

This component is a single-channel 8-bit digital-to-analog converter. It can drive its output between 0V and VDD, with a precision of approximately 12.9 mV. It can communicate directly over I<sup>2</sup>C, or over CAN through the bridge. Please see the DAC081C085 datasheet for more information.

On startup, the DAC's output is set to high-impedance. Once a value is set it will be configured to normal operation, and output the desired voltage.

## CAN Operation

### Get Sensor Data

Not applicable. This device will not respond to Get Sensor Data requests.

### Set Sensor Data

To set the DAC value, a single byte needs to be transmitted with the requested DAC setting. See Table 5.

**Table 5: CAN Set DAC Data Payload**

Byte	Data	Notes
0	DAC Setting	0x00 - 0xFF representing 0 - 3.3V

Example: Setting the DAC to approximately 1.65 V. See Table 6.

**Table 6: CAN Set DAC Data Example**

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x109	False	1	0x80

## I<sup>2</sup>C Operation

Please consult the DAC081C085 datasheet for details on I<sup>2</sup>C operation.

## 2.2 Motion Sensor (0x1D)

**Part:** STMicroelectronics LIS33DE

**Datasheet:** [www.st.com/stonline/products/literature/ds/15596/lis33de.pdf](http://www.st.com/stonline/products/literature/ds/15596/lis33de.pdf)

This component is a 3-axis linear accelerometer. It can communicate directly over I<sup>2</sup>C or over CAN through the bridge. See the PCB silkscreen for the orientation of X, Y, and Z. Please see the device's datasheet to correlate the digital reading with the physical value.

## CAN Operation

### Get Sensor Data

The motion sensor will respond with 3 bytes of accelerometer data when a Get Sensor Data request is made. See Table 7.

Getting Sensor Data is equivalent to doing a multi-byte read from the OUT\_X register, as described in the device datasheet.

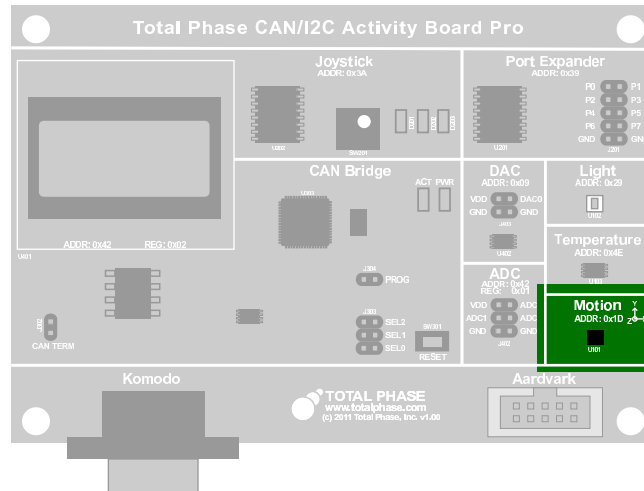


Figure 2: Motion Sensor

Table 7: CAN Get Motion Data Payload

Byte	Data	Notes
0	X acceleration	2's complement value
1	Y acceleration	2's complement value
2	Z acceleration	2's complement value

Example: Polling the Motion sensor. See Table 8.

Table 8: CAN Get Motion Data Example

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x01D	True	3	N/A
Activity Board	0x01D	False	3	0xAA, 0xBB, 0xCC

### Set Sensor Data

Not applicable. This device will not respond to Set Sensor Data requests.

### I<sup>2</sup>C Operation

Please consult the LIS33DE datasheet for details on I<sup>2</sup>C operation.

### 2.3 Light Sensor (0x29)

**Part:** Avago Technologies ADPS-9300

**Datasheet:** <http://www.avagotech.com/docs/AV02-1077EN>

This light sensor converts light intensity (irradiance) into a 16-bit digital signal. It can communicate directly over I<sup>2</sup>C, or over CAN through the bridge. Please see the device's datasheet to correlate the digital reading with the irradiance value.

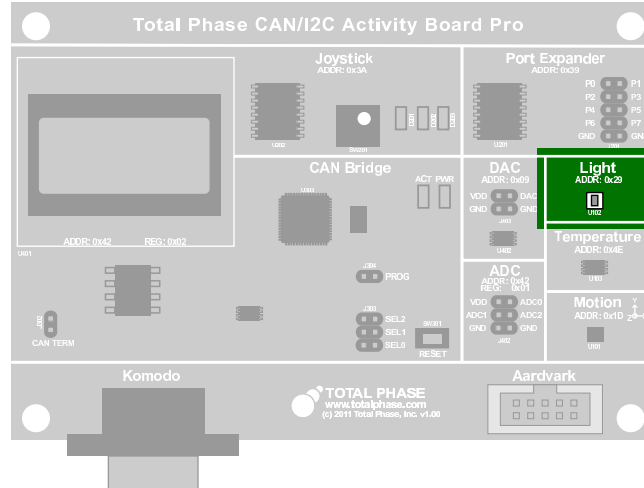


Figure 3: Light Sensor

## CAN Operation

### Get Sensor Data

The light sensor will respond with 2 bytes of irradiance value within the visible spectrum when the Get Sensor Data request is made. See Table 9.

Getting Sensor Data is equivalent to reading from the Ch0 light sensor, as described in the device datasheet.

Table 9: CAN Get Light Data Payload

Byte	Data	Notes
0	Data0	low byte of irradiance value
1	Data1	high byte of irradiance value

Example: Polling the light sensor. See Table 10.

Table 10: CAN Get Light Data Example

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x029	True	2	N/A
Activity Board	0x029	False	2	0xAA, 0xBB

### Set Sensor Data

Not applicable. This device will not respond to Set Sensor Data requests.

## I<sup>2</sup>C Operation

Please consult the ADPS-9300 datasheet for details on I<sup>2</sup>C operation.

## 2.4 GPIO Port Expander (0x39)

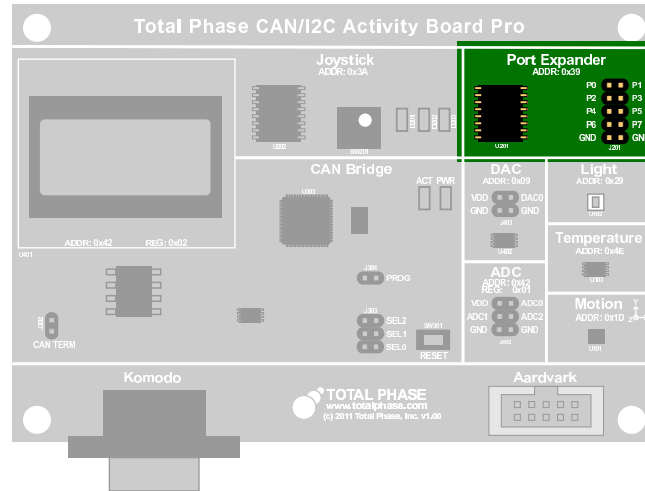


Figure 4: GPIO Port Expander

**Part:** NXP Semiconductors PCA9554AD

**Datasheet:** <http://ics.nxp.com/products/pca/datasheet/pca9554.pca9554a.pdf>

This is an 8-pin port expander which can be accessed through CAN or I<sup>2</sup>C . On start-up, all pins are configured as inputs, and can be read over CAN. By communicating directly with the device over I<sup>2</sup>C , it is possible to configure the pins as outputs. The port expander's pins are connected to a header for easy access, as described in Section 3.1. If interrupts are not disabled, changes to the inputs will cause the bridge to broadcast the data on the CAN bus.

### CAN Operation

#### Get Sensor Data

The port expander will respond with 1 byte of data describing the current value of each input pin. See Table 11.

Getting the Sensor data is equivalent to reading from the Input Register, as described in the device datasheet.

Table 11: CAN Get GPIO Data Payload

Byte	Data	Notes
0	Input Value	Bit mask of each input pin

Example: Polling the GPIO port expander. See Table 12.

#### Set Sensor Data

**Table 12: CAN Get GPIO Data Example**

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x039	True	1	N/A
Activity Board	0x039	False	1	0xAA

The outputs of the port expander can be set by sending 1 byte of data describing the desired value of each output. See Table 13.

Setting the Sensor Data is equivalent to writing to the Output Register, as described in the device datasheet.

Note that the port expander powers up as all inputs. In order to have outputs configured the Extended Opcodes will have to be used.

**Table 13: CAN Set GPIO Data Payload**

Byte	Data	Notes
0	Output Value	Bit mask of desired output on each pin

Example: Setting every other output high on the GPIO port expander. See Table 14.

**Table 14: CAN Set GPIO Data Example**

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x139	False	1	0xAA

## I<sup>2</sup>C Operation

Please consult the PCA9554AD datasheet for details on I<sup>2</sup>C operation.

### 2.5 Joystick/LEDs (0x3A)

**Parts:** NXP Semiconductors PCA9554AD

**Datasheet:** <http://ics.nxp.com/products/pca/datasheet/pca9554.pca9554a.pdf>

The joystick and LEDs are connected to an NXP PCA9554AD port expander. The microcontroller communicates with the joystick and LEDs through this port expander. The joystick and LED connections to the port expander pinout are listed in Table 15.

This two-axis joystick is a very simple device. It has five output pins (up, down, left, right, and select) which are asserted high when the joystick is moved to that position. These outputs are then connected to an NXP I/O port expander which can communicate the status over CAN and I<sup>2</sup>C.

There are three active high LEDs controlled by the port expander: D201, D202, and D303. The color of these LEDs are specified in Table 15.

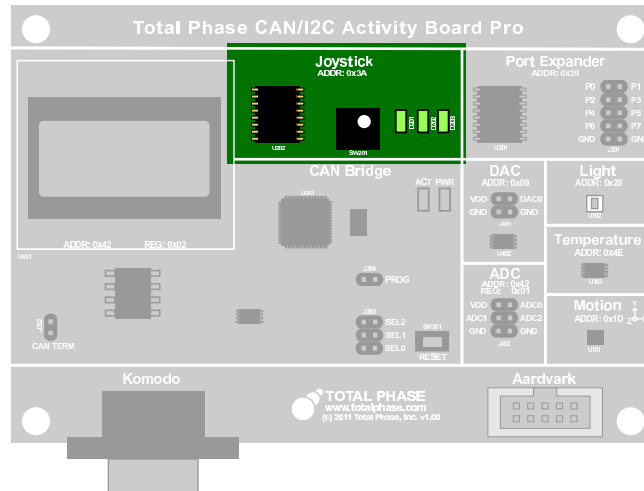


Figure 5: Joystick, LEDs, and Port Expander #2

On start up the port expander is configured to have all joystick connections as inputs, and all LED connections as outputs.

Table 15: Connections to Joystick, LED, and Port Expander #2 Pinout

Port Expander Pin	Direction	Connection
IO0	Input	Joystick UP
IO1	Input	Joystick RIGHT
IO2	Input	Joystick SELECT
IO3	Input	Joystick DOWN
IO4	Input	Joystick LEFT
IO5	Output	Amber LED D201
IO6	Output	Green LED D202
IO7	Output	Green LED D203

## CAN Operation

The operation of the Joystick and LEDs is equivalent to that of the GPIO Port Expander (Section 2.4), except that the node ID is 0x3A instead of 0x39.

## I<sup>2</sup>C Operation

Please consult the PCA9554AD datasheet for details on I<sup>2</sup>C operation. Do not attempt to configure pins IO0-IO4 as outputs, this can damage the CAN/I<sup>2</sup>C Activity Board Pro .

### 2.6 ADC/LCD (0x42)

**Part:** Internal to CAN Bridge

**Datasheet:** N/A



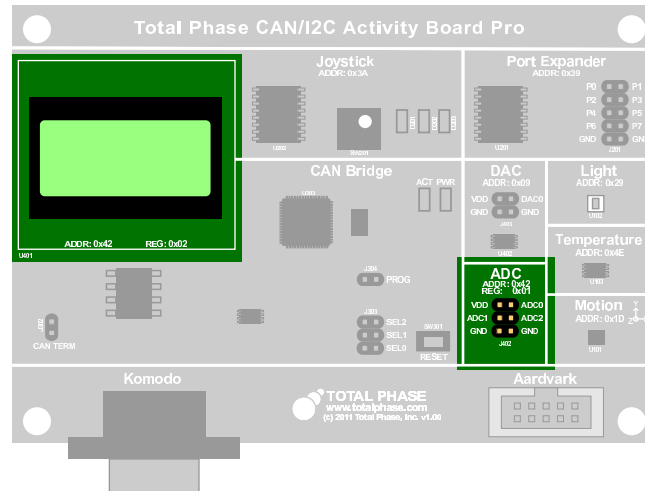


Figure 6: ADC and LCD

Unlike all the other devices on the CAN/I<sup>2</sup>C Activity Board Pro , the ADC and LCD are not external I<sup>2</sup>C devices. These internal features can be accessed over I<sup>2</sup>C or CAN at the node address of 0x42.

The CAN Bridge MCU has a built-in ADC which is exposed on the PCB. The CAN/I<sup>2</sup>C Activity Board Pro allows the user to read 3 of these analog inputs with an 8-bit resolution. Inputs may range from 0V to a maximum of 3.3V.

To determine the analog input value from the received ADC data, use the following equation:

$$V_{in} = \frac{ADC * 3.3V}{255}$$

The LCD is a 2x8 character display that is connected to the CAN bridge over a parallel bus. The characters on the display are ASCII encoded.

## CAN Operation

Because the ADC and LCD slaves are internal to the CAN bridge, CAN communication will not actually cause any I<sup>2</sup>C traffic to be transmitted on the bus. Whereas requests to other nodes would cause an appropriate I<sup>2</sup>C write/read, these nodes are simply handled internally. This is true even when using an Extended Opcode.

### Get Sensor Data

The CAN Bridge will respond with 3 bytes of ADC information when the Get Sensor Data request is made. See Table 16.

The Get Sensor Data will only get data from the ADC. It will not return any LCD information.

Example: Polling the ADC. See Table 17.

### Set Sensor Data

The Set Sensor Data is used to set the LCD text on the screen. See 18.

**Table 16: CAN Get ADC Data Payload**

Byte	Data	Notes
0	ADC Ch0	8-bit unsigned
1	ADC Ch1	8-bit unsigned
2	ADC Ch2	8-bit unsigned

**Table 17: CAN Get ADC Data Example**

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x042	True	3	N/A
Activity Board	0x042	False	3	0xAA, 0xBB, 0xCC

The Set Sensor Data will only set data on the LCD. It will not set any ADC information.

The LCD screen is broken up into four segments of 4 characters. Each data segment is written to individually. If not all 4 characters of a segment are included in the CAN payload, then the remainder are filled with spaces.

**Table 18: CAN Set LCD Data Payload**

Byte	Data	Notes
0	Segment Number	
1	Character 0	ASCII encoded
2	Character 1	ASCII encoded
3	Character 2	ASCII encoded
4	Character 3	ASCII encoded

Example: Writing "Hello World!" to the LCD screen. See Table 19.

**Table 19: CAN Set LCD Data Example**

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x142	False	5	0x00, 0x48, 0x65, 0x6c, 0x6c
Komodo	0x142	False	5	0x01, 0x6f, 0x20, 0x57, 0x6f
Komodo	0x142	False	5	0x02, 0x72, 0x6c, 0x64, 0x21
Komodo	0x142	False	2	0x03, 0x20

## I<sup>2</sup>C Operation

Because both the ADC and LCD share a device address of 0x42, they are individually referenced by a register address. The ADC is at register address 0x01, and the LCD is at register address 0x02.

### Setting the ADC Value

This is not applicable. Attempting to set the ADC value will do nothing.

### Getting the ADC Value

Getting the ADC Value is a two step process. It requires setting up the proper register address, and then reading back the 3 ADC values. Reading more than 3 bytes will return 0xFF for any additional bytes.

The ADC will respond with 3 bytes of data. See Table 20.

**Table 20:** I<sup>2</sup>C Get ADC Data Payload

Byte	Data	Notes
0	ADC Ch0	8-bit unsigned
1	ADC Ch1	8-bit unsigned
2	ADC Ch2	8-bit unsigned

Example: Polling ADC sensor. See Table 21.

**Table 21:** I<sup>2</sup>C Get ADC Data Example

Direction	Stop	Device ID	Data
Write	No Stop	0x42	0x01
Read	Stop	0x42	0xAA, 0xBB, 0xCC

### Setting the LCD Display

The LCD screen is broken up into four segments of 4 characters. Each data segment can be written to individually. If not all 4 characters of a segment are included in the I<sup>2</sup>C payload, then the remainder are filled with spaces.

The LCD segment will also auto-increment when operated in I<sup>2</sup>C mode. Therefore if segment 0x00 is selected, and 8 bytes are written, then the entire first line will be configured.

See Table 22 for a description of the data payload.

**Table 22:** I<sup>2</sup>C Set LCD Data Payload

Byte	Data	Notes
0	Register Address	0x02 for LCD
1	Segment Number	
2	Character 0	ASCII encoded
	...	
n	Character n	ASCII encoded

Example: Writing “Hello World” to the LCD screen. See Table 23.

### Getting the LCD Display

Over I<sup>2</sup>C it is also possible to read out the current LCD setting. Like the ADC this requires two steps. The first step sets up the register we wish to read from as well as the segment to start

**Table 23: I<sup>2</sup>C Set LCD Data Example**

Direction	Stop	Device ID	Data
Write	Stop	0x42	0x02, 0x00, 0x48, 0x65, 0x6c, 0x6c, 0x6f, 0x20, 0x57, 0x6f, 0x72, 0x6c, 0x64, 0x21, 0x20

reading from. Bytes are then read consecutively out.

See Table 24 for a description of the data payload.

**Table 24: I<sup>2</sup>C Get LCD Data Payload**

Byte	Data	Notes
0	Character 0	ASCII encoded
1	Character 1	ASCII encoded
...		
n	Character n	ASCII encoded

Example: Reading data out of LCD screen. See Table 25.

**Table 25: I<sup>2</sup>C Get LCD Data Example**

Direction	Stop	Device ID	Data
Write	No Stop	0x42	0x02, 0x00
Read	Stop	0x42	0x48, 0x65, 0x6c, 0x6c, ...

## 2.7 Temperature Sensor (0x4E)

**Part:** Maxim Integrated Products DS75

**Datasheet:** <http://datasheets.maxim-ic.com/en/ds/DS75.pdf>

This temperature sensor provides temperature readings over a range of -55° C to +125° C. It can communicate directly over I<sup>2</sup>C or over CAN through the bridge.

### CAN Operation

To request data from the temperature sensor over CAN, send a remote frame with an ID of 0x4E. A CAN data frame will then be broadcast with one byte of temperature data. On start up this device is configured for 9-bit temperature readings.

#### Get Sensor Data

The temperature sensor will respond with 2 bytes of temperature data when a Get Sensor Data request is made. See Table 26.

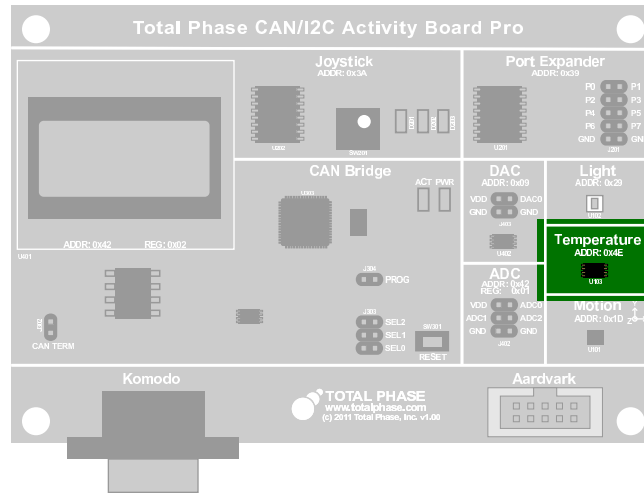


Figure 7: Temperature Sensor

Getting Sensor Data is equivalent to reading from the Temperature Register as described in the device datasheet.

Table 26: CAN Get Temperature Data Payload

Byte	Data	Notes
0	MS byte	See datasheet for more information
1	LS byte	See datasheet for more information

Example: Polling the temperature sensor. See Table 27.

Table 27: CAN Get Temperature Data Example

Transmitter	CAN ID	RTR	DLC	Data
Komodo	0x04E	True	2	N/A
Activity Board	0x04E	False	2	0xAA, 0xB0

### Set Sensor Data

Not applicable. This device will not respond to Set Sensor Data requests.

### I<sup>2</sup>C Operation

Please consult the DS75 datasheet for details on I<sup>2</sup>C operation.

### 3 Connectors, Headers, Buttons, and LEDs

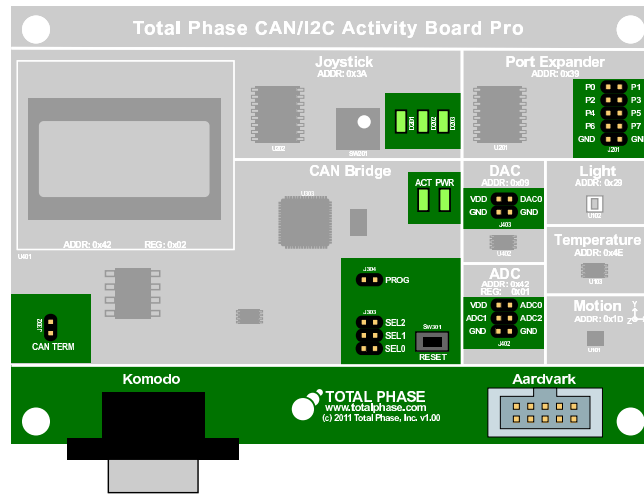


Figure 8: CAN/I<sup>2</sup>C Activity Board Pro Connectors

#### 3.1 Port Expander Header (J201)

This header allows the port expander to interface with external circuitry. See Section 2.4 for more information.

#### 3.2 Komodo Connector (J301)

This connector is provided to interface with the Komodo CAN Duo Interface. It is a male DE-9 connector compatible with the SAE J1939 CAN-CIA standard. The pinout of this connector is shown in Figure 9 and Table 28.

It is necessary to provide target power (4.5V-5.0V) to the CAN/I<sup>2</sup>C Activity Board Pro through V+ on the Komodo connector, or through VDD on the Aardvark connector.

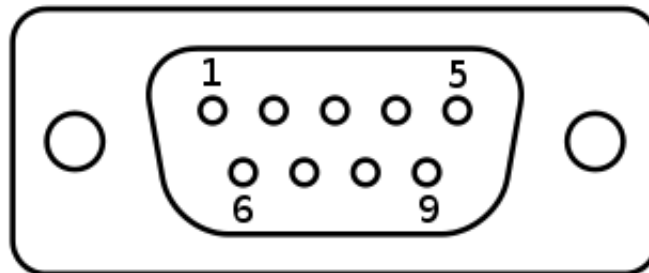


Figure 9: DE-9 Connector Pin Numbers

**Table 28: Komodo Connector J301 Pinout**

Pin #	Signal
1	No Connect
2	CAN-
3	GND
4	No Connect
5	No Connect
6	No Connect
7	CAN+
8	No Connect
9	V+

### 3.3 CAN Termination Header (J302)

This header can be jumped to connect a 120 Ohm parallel termination resistor to the CAN bus.

### 3.4 Select Header (J303)

The Selection Header provides a mechanism for changing the behavior of the CAN bridge. These pins are sampled once upon reset. To change the mode, simply place jumpers on the appropriate selection, and hit the reset button.

**Table 29: Selection Header J303 Pinout**

Signal	Function
SEL0	Sets the CAN bridge to Autobaud on start-up.
SEL1	Sets the CAN bridge to broadcast all sensor data every 100 ms.
SEL2	Disables interrupt handling of devices on the CAN bridge.

#### Notes:

- If SEL0 is selected, the CAN bridge will not process any packets on CAN or I<sup>2</sup>C until a baudrate has been selected. This can take several seconds.
- SEL1 should never be selected if the CAN/I<sup>2</sup>C Activity Board Pro is being used in I<sup>2</sup>C mode, as it can cause multi-master arbitration errors.
- SEL2 should be selected whenever the CAN/I<sup>2</sup>C Activity Board Pro is being used in I<sup>2</sup>C mode. This will prevent multi-master arbitration errors when interrupts occur.

### 3.5 Program Header (J304)

This header must be jumped to program the AT90CAN32 microcontroller.

### 3.6 Aardvark Connector (J401)

This connector is provided to interface with the Aardvark I<sup>2</sup>C /SPI Host Adapter. It is necessary to provide target power (4.5V-5.0V) to the CAN/I<sup>2</sup>C Activity Board Pro through VDD on this connector, or through V+ on the Komodo connector.

This connector's pinout is listed in Table 30.

**Table 30: Aardvark Connector J401 Pinout**

Pin #	Signal
1	SCL
2	GND
3	SDA
4	+5V
5	MISO*
6	+5V
7	SCLK*
8	MOSI*
9	SS*
10	GND

\* - SPI signals are for internal use only.

### 3.7 ADC Header (J402)

This header includes power, ground, and three analog input pins to the ADC. This connector's pinout is listed in Table 31.

See Section 2.6 for more details about the ADC.

**Table 31: ADC Header J402 Pinout**

Pin #	Signal	Function
1	VDD	3.3V
2	ADC0	Input to ADC
3	ADC1	Input to ADC
4	ADC2	Input to ADC
5	GND	Ground
6	GND	Ground

### 3.8 DAC Header (J403)

This header includes power, ground, and the DAC's analog output. This connector's pinout is listed in Table 32.

See Section 2.1 for more details about the DAC.



**Table 32:** DAC Header J403 Pinout

Pin #	Signal	Function
1	VDD	3.3V
2	DAC0	Analog Output from DAC
3	GND	Ground
4	GND	Ground

### 3.9 Reset Button (SW301)

This button resets the CAN/I<sup>2</sup>C Activity Board Pro microcontroller and restores the default configuration of all the peripherals.

### 3.10 Power LED (D304)

This green LED illuminates when the CAN/I<sup>2</sup>C Activity Board Pro is powered.

### 3.11 Activity LED (D305)

This amber LED blinks whenever the CAN/I<sup>2</sup>C Activity Board Pro is processing a CAN or I<sup>2</sup>C packet.

## 4 References

### 4.1 Examples

Example scripts which communicate with the target devices on the CAN/I<sup>2</sup>C Activity Board Pro are available for download on the Total Phase website: <http://www.totalphase.com/support/product>.

### 4.2 Technical Specifications

The CAN/I<sup>2</sup>C Activity Board Pro draws approximately 50mA of current from the power source, either the Komodo Interface or the Aardvark adapter.

Detailed information about the Technical Specifications of the Komodo CAN Duo Interface and the Aardvark I<sup>2</sup>C /SPI Host Adapter can be found on the Total Phase website: <http://www.totalphase.com>.

## 5 Legal / Contact

### 5.1 Disclaimer

All of the software and documentation provided in this datasheet, is copyright Total Phase, Inc. ("Total Phase"). License is granted to the user to freely use and distribute the software and documentation in complete and unaltered form, provided that the purpose is to use or evaluate Total Phase products. Distribution rights do not include public posting or mirroring on Internet websites. Only a link to the Total Phase download area can be provided on such public websites.

Total Phase shall in no event be liable to any party for direct, indirect, special, general, incidental, or consequential damages arising from the use of its site, the software or documentation downloaded from its site, or any derivative works thereof, even if Total Phase or distributors have been advised of the possibility of such damage. The software, its documentation, and any derivative works is provided on an "as-is" basis, and thus comes with absolutely no warranty, either expressed or implied. This disclaimer includes, but is not limited to, implied warranties of merchantability, fitness for any particular purpose, and non-infringement. Total Phase and distributors have no obligation to provide maintenance, support, or updates.

Information in this document is subject to change without notice and should not be construed as a commitment by Total Phase. While the information contained herein is believed to be accurate, Total Phase assumes no responsibility for any errors and/or omissions that may appear in this document.

### 5.2 Life Support Equipment Policy

Total Phase products are not authorized for use in life support devices or systems. Life support devices or systems include, but are not limited to, surgical implants, medical systems, and other safety-critical systems in which failure of a Total Phase product could cause personal injury or loss of life. Should a Total Phase product be used in such an unauthorized manner, Buyer agrees to indemnify and hold harmless Total Phase, its officers, employees, affiliates, and distributors from any and all claims arising from such use, even if such claim alleges that Total Phase was negligent in the design or manufacture of its product.

### 5.3 Contact Information

Total Phase can be found on the Internet at <http://www.totalphase.com/>. If you have support-related questions, please email the product engineers at [support@totalphase.com](mailto:support@totalphase.com). For sales inquiries, please contact [sales@totalphase.com](mailto:sales@totalphase.com).

© 2011 Total Phase, Inc.  
All rights reserved.